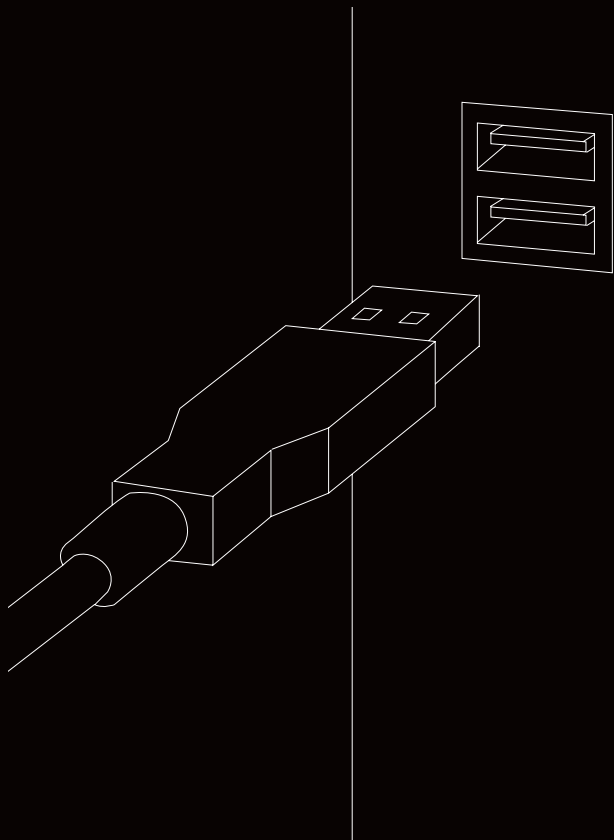# K4 TKL LITE – MANUAL

xtrfy

PLUG-AND-PLAY

Connect the K4 to the USB port. Driver installation starts automatically.

SETTINGS AND FUNCTIONS

The K4 TKL Lite features a range of customization options and convenient quick keys. All settings are made directly on the keyboard, by pressing the FN key + the desired setting key.
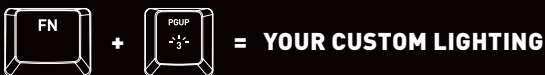
LED ILLUMINATION

FN + **INS** = **FULL BACKLIGHT LED EFFECTS**

Press FN + INS repeatedly to switch between 5 different backlight effects.

FN + **HOME** = **WAVE EFFECTS**

Press FN + HOME repeatedly to switch between 4 different wave effects.

FN + **PGUP** = **YOUR CUSTOM LIGHTING**

To choose which keys to light up: Press and hold FN + PGUP for 3 seconds. When the PGUP key flashes, press the keys that you want to illuminate. When you're done, press and hold FN+PGUP for 3 seconds.

FN + **DEL** = **TYPING EFFECTS**

Press FN + DEL repeatedly to switch between 6 different typing effects. (Visible when typing.)

FN + **END** = **CONSTANT LIGHT/LIGHTING OFF**

Press FN + END repeatedly to turn the illumination on and off.

FN + **PGDN** = **BREATHING EFFECTS**

Press FN + PGDN to switch between 2 different breathing effects.

FN + = **ADJUST LED BRIGHTNESS**

Press FN + the up/down arrow keys to increase/decrease the brightness of the LED lighting.

FN + = **ADJUST LED EFFECT SPEED**

Press FN + the left/right arrow keys to decrease/increase the speed of the LED effects.

GAME PRESETS

FN + **1** = **LEAGUE OF LEGENDS BACKLIGHT**

Press FN + 1 to illuminate the most common keys used in League of Legends.

FN + **2** = **COUNTER-STRIKE BACKLIGHT**

Press FN + 2 to illuminate the most common keys used in Counter-Strike.

FN + **3** = **OVERWATCH BACKLIGHT**

Press FN + 3 to illuminate the most common keys used in Overwatch.

FN + **$4** = **DOTA 2 BACKLIGHT**

Press FN + 4 to illuminate the most common keys used in Dota 2.

FN + **%5** = **WASD BACKLIGHT**

Press FN + 5 to illuminate W, A, S, D and the arrow keys.

FN + **&6** = **MIDDLE SECTION BACKLIGHT**

Press FN + 6 to illuminate the keys in the middle section of the keyboard.

OTHER USEFUL KEYS AND SHORTCUTS

FN + ✗	=	Lock Windows key
FN + F1–F8	=	Media controls
FN + F9	=	E-mail
FN + F10	=	Web browser
FN + F11	=	Lock all keys
FN + F12	=	Calculator

TROUBLESHOOTING

» Make sure the K4's USB connector is firmly attached to your computer's USB port.

» Connect to another USB port.

» Connect to another computer.

» Factory reset the keyboard by pressing and holding the FN key + backspace for 10 seconds.

NEED BACKUP?

If you have any questions, we're never more than an email away. Contact us at support@xtrfy.com

CHECK OUT MORE XTRFY PRODUCTS AT XTRFY.COM

DESIGNED IN
SWEDEN